# LongEZ N3R

#### **ENGINE START:**

10A Buss Jump - On

Avionics On & Set

Mixture rich/carb heat cold

Fuel: Fuel Pump - On & OK

Note & Slct fullest tank

Prime - elec & Carb

Electric Ignitions - On

Clear and Start

50A Master - On

Alternator - On & Volts OK

Buss Jump - Off

HSI & AP - On

#### **EMERGENCY**

Landing Break - down

Strobes - On

- •Boost pump on •Mixture rich
- •Carb heat on •Backup Elec?

# LongEZ - N3R EXTERIOR STATE

#### **COCKPIT**

Store Gear, charts & stuff Check Headset batteries Mag's Off Mixture/Throttle Off Controls free Fuel quantity as required

## CANARD AREA

Elevator- general condition Static/Pitot - clear Elevetor counter weights OK

## LongEZ N3R

#### RUN UP:

Fuel caps locked Controls - free and correct Lights - as required Flight Instruments - set Engine Run Up

- Mags
- Carb Heat
- Oil Pressure Fuel Pres
- Volt > 14 on both systems

#### TAKE OFF:

Do This Check Before Takeoff Doors, Trim, Carb, Boost, & Transponder Drag Door- up w wheel off Gear up > 100kts Boost Pump - off (>1000') Lean Mixture - as required

# LongEZ N3R

#### CLIMB/CRUISE

 $\label{eq:continuous_continuous$ 

## **DESCENT/LANDING:**

G - Gas	Downwind	100
U - Gear	Base	90
<b>M</b> - Mixture	Final 7	0-80
P - Pump	Touchdown	~60

Carb Heat - As required

#### SHUT DOWN

Pump - Off Electrical - Off Mixture - Off Mags - Off HSI -OFF Master - Off

# LongEZ - N3R EXTERIOR STATE

#### RIGHT SIDE

Fuel Cap - On & Locked Canopy - hinges OK Wing/winglet condition Rudder/Aileron condition Drain Sump

## **AFT & ENGINE**

Main Gear secure
Brakes/Tires wear-50 PSI
Cooling inlet clear
Drain Sump
Cowling secure
Propeller & Exhaust condition
Engine condition & Oil Level

# LongEZ - N3R EXTERIOR STATE

## LEFT SIDE

Fuel Cap - On & Locked Fuel tank vent clear Wing/winglet condition Rudder/Aileron condition Drain Sump

## NOSE GEAR & DRAGDOOR

Lift, extend & Lock Gear Strut/Pivot - undamaged Wheel Damper - OK Tire wear/ 40 PSI Landing Brake-down & check